



Important Information- Do Not Discard

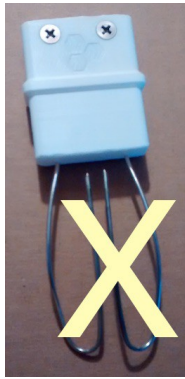

The **.999 fine silver rods** occasionally become badly bent from "overly enthusiastic handling" by delivery personnel: **Please Check the Rods Before Using!** The rods **should not** touch each other or be at all close to one another. If they appear bent, please *gently* straighten the rods.

Make sure that the "J" shaped rods curve towards the *front* of the case, i.e. the ends of the rods should be on the side of the case with the logo and control buttons, as shown in this photo. --->>>

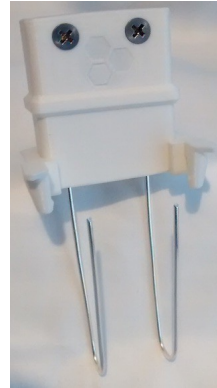

The rods should be evenly spaced (1" [one inch] apart) beginning at the point where they exit the case and along their entire length.

Processing Time Can Vary Greatly

The time taken to make nano silver can vary quite widely, depending on the temperature of the distilled water, room temperature, the setting (Level 1-Level 5), and even such subtle influences as solar wind and cosmic rays! For faster operation, gently wipe the rods between uses, keep your distilled water at room temperature, and use the machine in a room at 70 degrees F (21 degrees C) or greater.

You can also speed up the operation by leaving a small amount (perhaps a tablespoon or two) of nano silver from the previous batch in the jar. This will "jump start" your next batch by providing some silver ions to start with. Don't use too much to start, or the machine will think you are using tap water and will blink **PINK** or **RED**.

Questions?

Silver-Healer users please contact:

support@honeycolony.com

SILVERengines proton users, please contact:

info@SILVERengines.com

Getting Started...

- Fill the jar with pure, distilled water to its neck (16 ounces). **NOTE:** This is the level of the prominent ridge just below the jar lid threads.
- **Do NOT Over-fill!** If the machine gets wet, your warranty will be voided. **ONLY** the silver wires should ever touch the water. The silver wire tips should be slightly above water level as pictured here.
- Set the jar lid aside to use later for storing your silver.
- Insert the machine in its saddle as pictured. The three saddle prongs center the wires in the mouth of the jar.
- Plug in the power cable and the machine will blink **RED**, **GREEN**, **BLUE**, and then a series of several **ORANGE** blinks as it tests the water for purity.
- If the machine blinks **RED** or **PINK** it has discovered that the water is not pure, distilled water. Find a better source of pure, distilled water and start over.
- When it is working OK, it begins slowly Blinking **BLUE**.
- When done, it will change to slowly Blinking **GREEN**.
- Allow 4 - 5 hours (as delivered, standard Level 3 setting).
- **Read the manual** while you're waiting for your first batch!
- Your results should be clear to slightly straw-colored.
- Filter your nano-silver through a paper coffee filter to remove any sediments, silver oxide, or tiny silver flakes.
- Gently wipe off the silver rods with a paper towel.
- Your nano-silver is now ready to use!



For **full documentation**, please visit one of the following websites:

HoneyColony **Silver Healer** brand: <http://honeycolony.com/silver-healer>

SILVERengines proton brand: <http://SILVERengines.com/proton>